

Dr. Fixit Premix

Asphalt Ready Mix for Cold Patch

Description

Dr. Fixit Premix is an asphalt ready mix high performance pavement / patching for deteriorated, potholes concrete or bituminous pavement surfaces. The repair shall make the surface be uniform, flexible and capable of retaining adhesive property to the substrates. It can be applied all year round wet / damp or dry pavements or surfaces.

Dr. Fixit Premix is composed of approved mineral aggregate and elastomeric modified asphalt capable for coating dry and wet aggregate without stripping.

Area of Application

- Repair roads, village roads, parking lots, asphalt, and concrete bridge.
- Renovation and maintenance work fine washboard surface pedestrian traffic.
- A pothole, cracks, cracks in the road. Pour of car in to house.

Rate of Uses

- 20 Kgs. for area 0.25 m² or 100 kgs. for 1 m² at average 5 cm. depth.


Method of Application

* Theoretical consumption without allowance for loss.

1. Clean the hole to be repaired. Use a Broom to sweep dirt or rock to lure them out.



2. Hole to be repaired as a geometric shape. The reason, it is easier to grind, compression and resistant to weight gain.

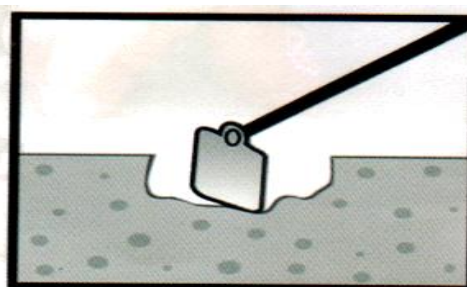

Dr. Fixit Premix

Asphalt Ready Mix for Cold Patch

- Put Dr. Fixit Premix into the hole and use a shovel or spade to decorate surface composed.



- Use a spade or shovel to compact easily with Dr. Fixit Premix firmly grounded to a desired level.



Precautions & Limitations

Dr. Fixit Premix takes time to coagulate at least 4 hours, so if you would like to rush open the traffic; you can use sand or stone dust. Pour on the top to protect Dr. Fixit Premix sticks with the car wheels'.

Technical Information

Properties	Specification / Standard Test method	Results
Appearance	Visual	Black glossy bituminous coat on Aggregates.
	ASTM D1664	➤ 90% for wet and dry aggregates.

Asphalt Ready Mix for Cold Patch

Packing : Bag 20 Kgs. in 2 layer plastic bags.

Shelf Life & Storage

- Store up to 1 year
- If using a bag should be tightly closed.
- Should open the bag and leave it for 2-3 hours before work.

Health & Safety Precaution

- If on skin, wash with soap and then wipe off the oil.

Disclaimer

The product information and the recommendations relating to the application and end-use of Dr.Fixit products, are based on Dr.Fixit's current knowledge and experience of the products when properly stored, handled and applied under normal conditions in accordance with Dr.Fixit's recommendations. In practice, the differences in materials, substrates and actual site conditions are such that no warranty in respect of merchantability or of fitness for a particular purpose, nor any liability arising out of any legal relationship whatsoever, can be inferred either from this information, or from any written recommendations, or from any other advice offered. The user of the product must test the product's suitability for the intended application and purpose. Dr.Fixit reserves the right to change the properties of its products without notice, so the company does not assume liability of any legal from this product information.



Bamco Supply & Services Limited (A group company of Pidilite Industries Ltd.)
699 Modernform Tower 15,17 FL., Srinakarin Rd., Pattanakarn, Suan Luang, Bangkok 10250, THAILAND.
T. +662 722-8535 F. +662 722-8381
Website: www.dr-fixit.co.th
E-mail: sales@pidilitebamco.com
Helpline Call +662 722 8535 #101